Trouble Shooting

If the unit doesn't operate...	Check that the batteries are installed correctly. or install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.

Care Information

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of European directives 88/378/EEC, directives 89/336/EEC, 92/31/EC, 93/68/EEC, 2004/108/EC , 2002/96/EC and 2003/108/EC, 2002/95/EC.

Warranty:
Should you in the unlikely event experience any problems with this product all our products have a six months guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

InspirationWorks UK Ltd
Charlotte Court
Proctor Way
LUTON
Bedfordshire
LU2 9PE
UK

www.inspirationworks.co.uk

INSPIRATION WORKS (UK)LTD

CATALANA DE INVESTIGACION Y DESARROLLO DE ELECTRONICASL

Peppa Pig © Astley Baker Davies/Entertainment One UK Limited 2003

© 2011 - CIDE toys - www.cidetoys.com

Rev.00
April 2011
Made in China
Printed in China

WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

Peppa Pig

2+

Peppa Pig's Little TV

Instruction Manual

The Unit

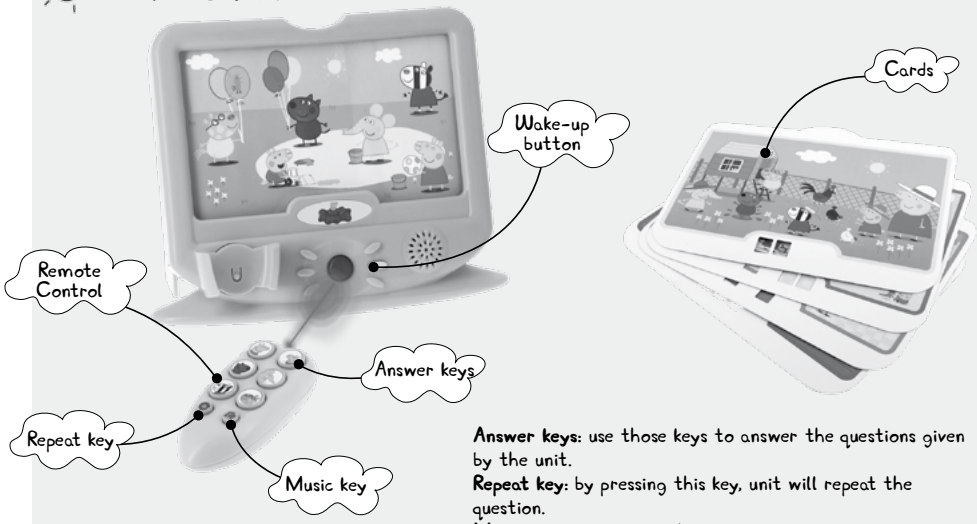

Answer keys: use those keys to answer the questions given by the unit.
Repeat key: by pressing this key, unit will repeat the question.
Music key: by pressing this key at any time, unit will interrupt the game and play a music related to the scene.
Wake-up key: use this key to awake or shut off the unit.

Important Information

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for future reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.

Content

- Unit
- Remote Control
- 4 double sided cards
- 2 feet for unit
- Instruction manual

inspiration works

How to play

Before playing, clip the two feet into the back of the unit to make it stable.

To turn the unit on, press on the wake-up key in front of the unit, or insert a card.

If a card is already inserted, by pressing the wake-up key the unit will trigger the questions of the card.

If no card is inserted, by pressing the wake-up key the unit will trigger the questions of the try-me sticker.

Use the Remote Control keys (6 characteres) to answer the questions. You have three attempts.
Press at any time the repeat key to hear the question again.
Press at any time the music key to hear music related to the scene.

At the sand pitch

Music time!

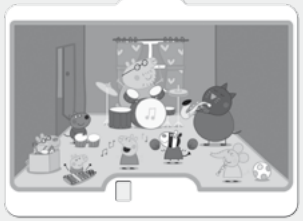

The playground

Playtime

Fairytales Picnic

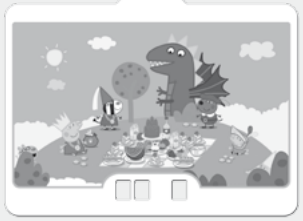

Snowy day

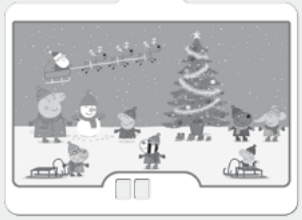

At the farm

At the beach

Birthday party

AUTOMATIC SHUT OFF

In order to save the battery life, the unit switches OFF if left idle for about three minutes.
To re-activate the unit, just press on the wake-up key.
You can also switch it off by pressing the wake-up key.

How to Change Batteries

Unit

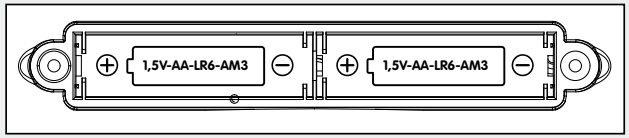

Remote Control

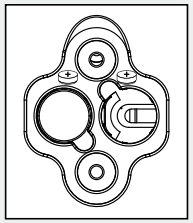

1. This product requires 2 x AA batteries for the unit and 2 x LR44 batteries for the RC.
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 2 x AA batteries into the compartment of the unit and 2 x LR44 batteries into the compartment of the RC ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Should the batteries have no polarity markings, the flat side of the battery should always be visible when batteries are in place.
7. Reassemble the battery cover and tighten the screw to secure.
8. Do not over tighten.

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Keep small batteries out of the reach of young children.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries.
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
  - Rechargeable batteries shall be charged only under the supervision of an adult.
  - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and come in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.